


Instructions for unlocking the Kone module type LCE

- ⌚ Make sure that the battery (9 V) is inserted in the service tool.
- ⌚ Set the RS232 switch to the correct position. (not available on LCECPU561)
- ⌚ Connect the 9-pin connector.
- ⌚ Press the button on the service tool, the LED should then light up green/orange.
- ⌚ If it doesn't light green/orange, try changing the battery.
- ⌚ You can now access the menus in the system.
- ⌚ Reset the switch and unplug the 9-pin connector.

NOTE: Works with software 6.7.18 or later, which is standard as of 2007. However, in some cases it can occur a little earlier. The Konexion card is valid for previous versions.

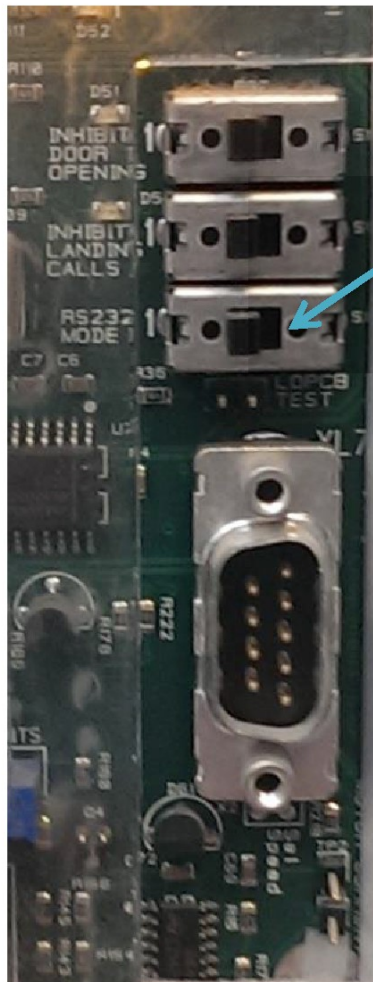

RS232
switch